


BOSTITCH®

Spring-Powered Stapler LOADING INSTRUCTIONS



1. Flip the stapler upside down and open the base (A) away from the body.

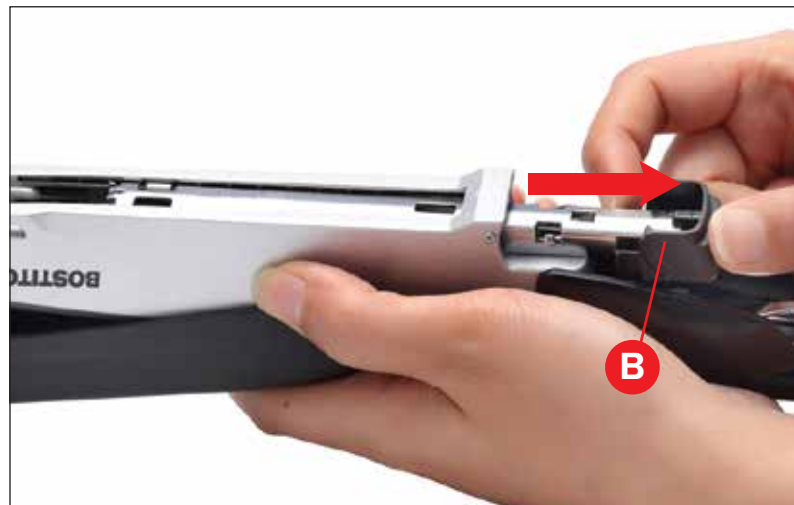

2. Pull the magazine pusher (B) back to expose the staple channel.



3. With the staple points facing up, drop the staples into the channel (C).



4. Push the magazine pusher (B) back in place until you hear it click shut.